




1. Remove the stylus from the side of center panel, near the touchscreen

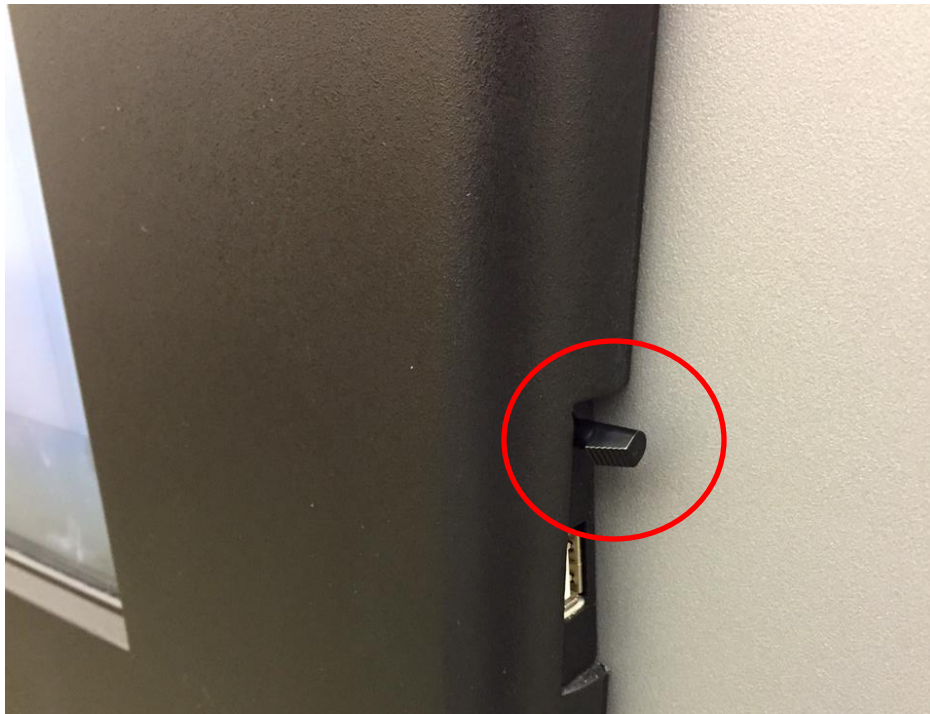


2. On the touchscreen, using the stylus, select/tap “select here to log in”

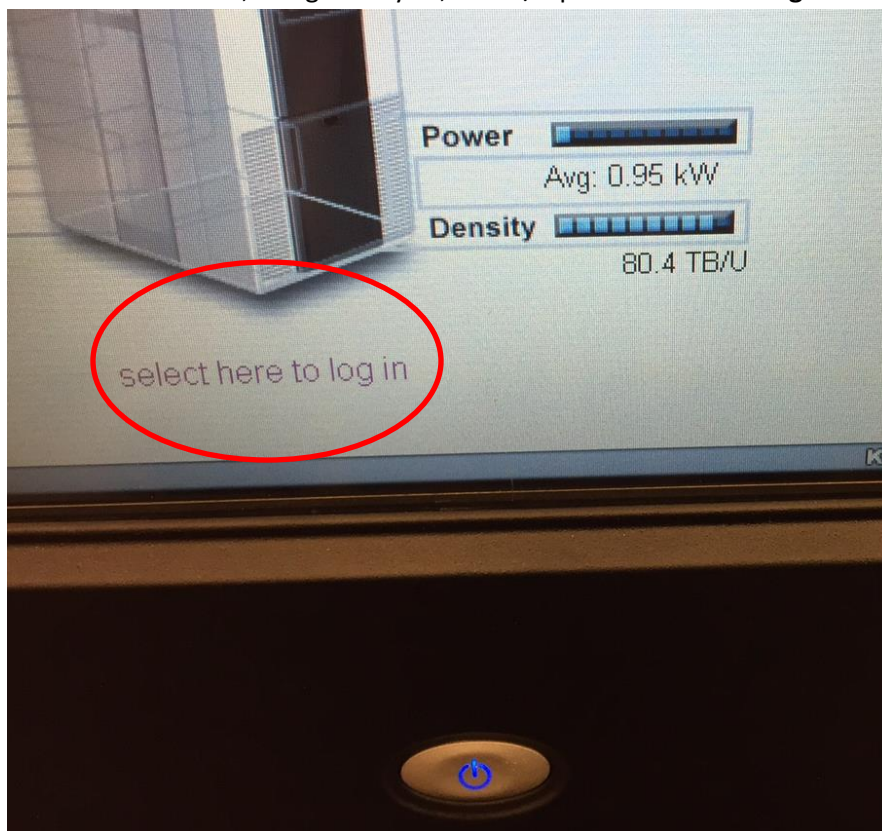


3. To use the keyboard, select/tap the keyboard icon in the bottom right of the screen. The toggle to switch between letters and numbers/other characters is in the bottom right.

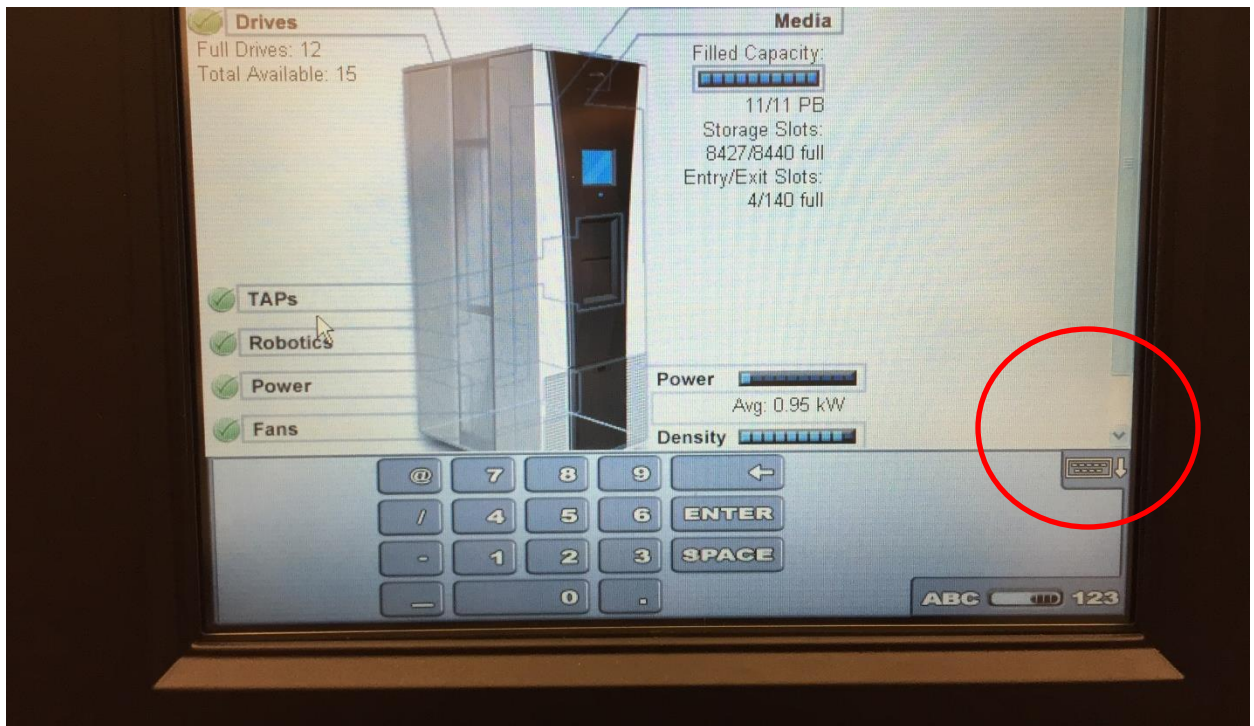


4. In the following screen, enter the following credentials in the User and Password fields, respectively, and then select/tap “Login”:
- User – operator
 - Password – mtp0spectra

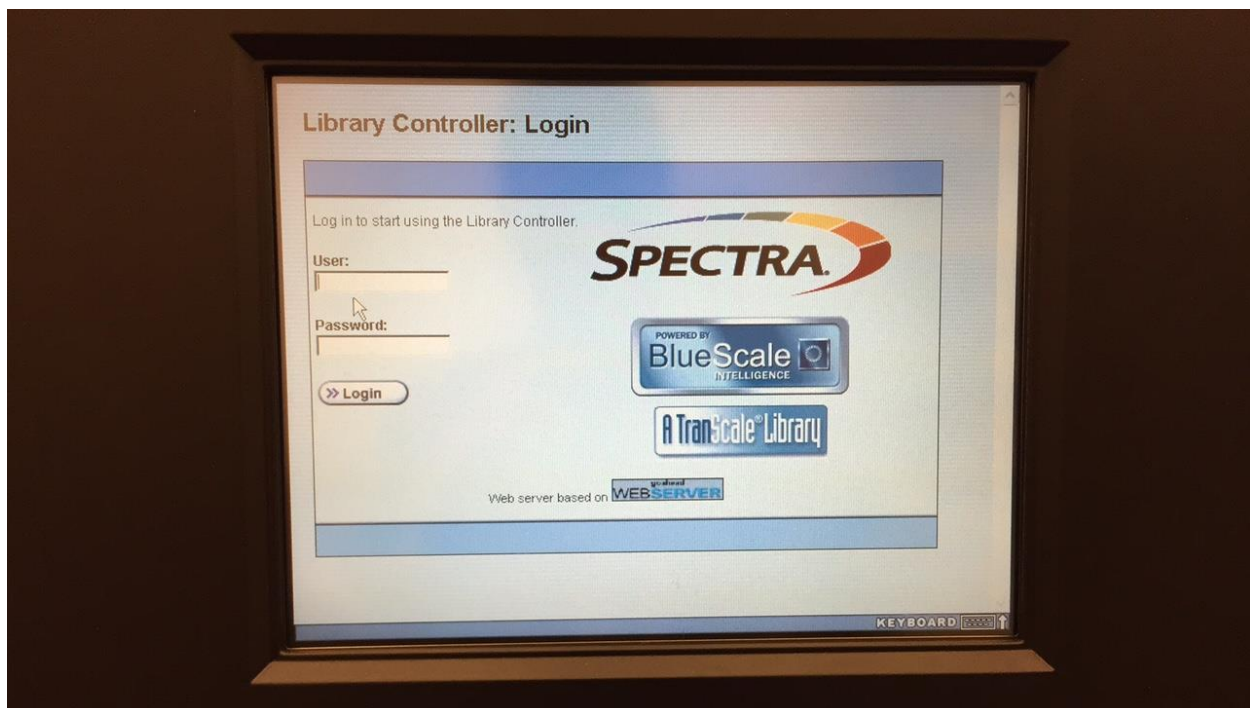


5. Once at the Home screen, in the left navigation pane, select/tap “Import/Export”

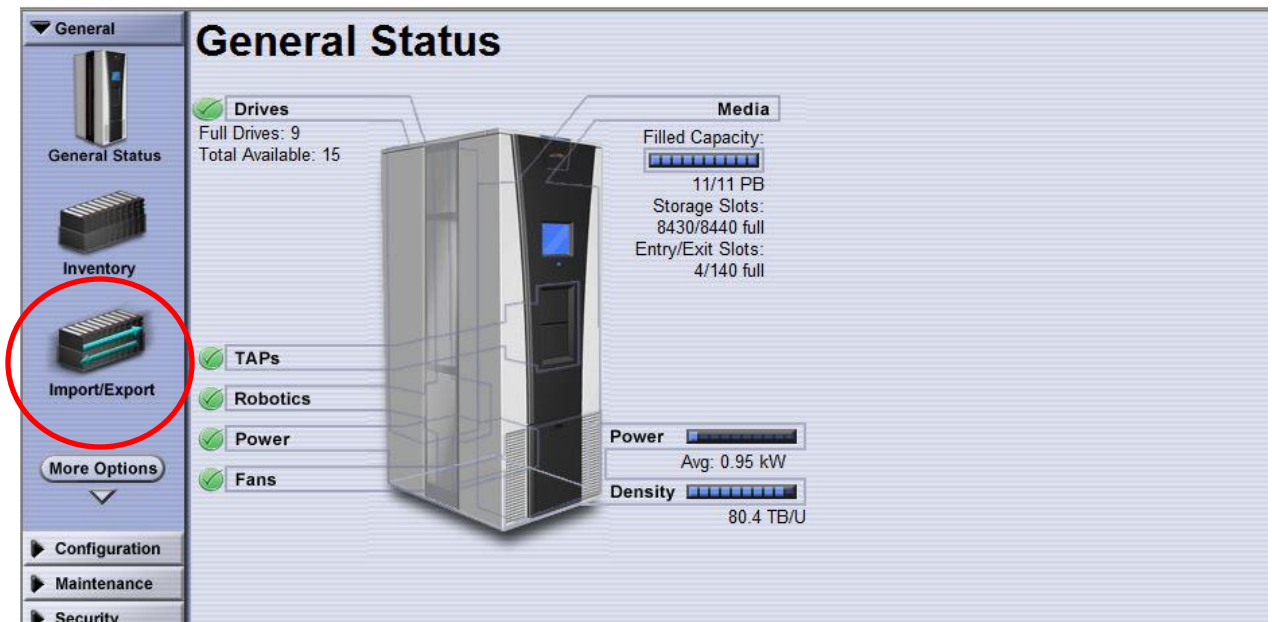

6. In the Import/Export screen, select/tap “Export/Exchange” for **Populated Chambers** in the **Entry/Exit** section

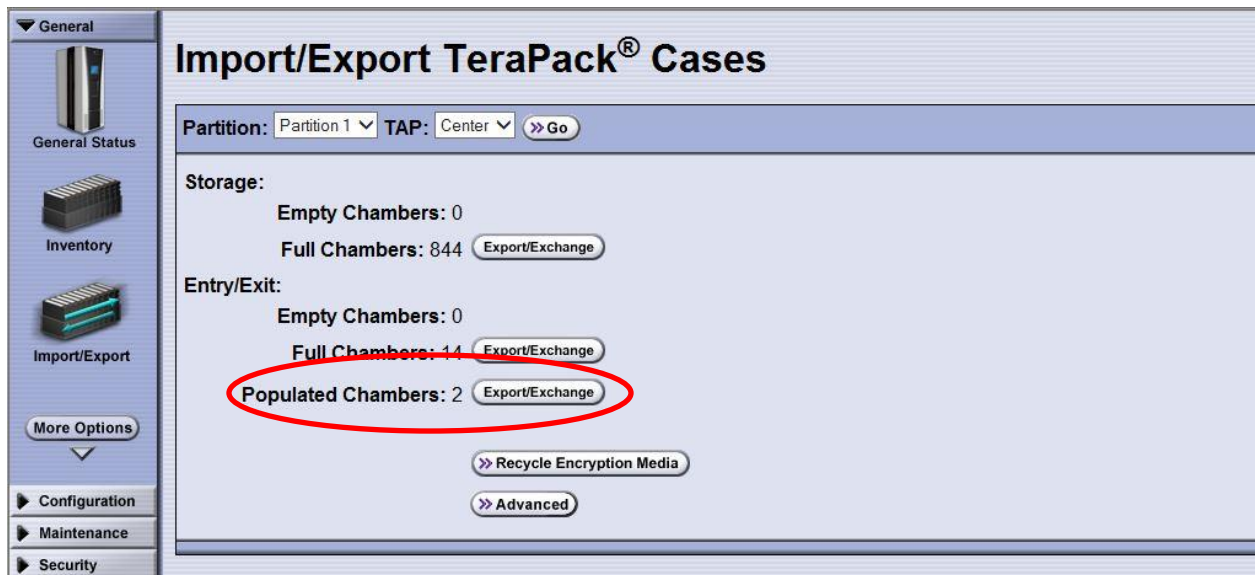


7. At this point, once a robot is available, the moves required to move the TeraPack to the TAP (import/export chamber) will begin.

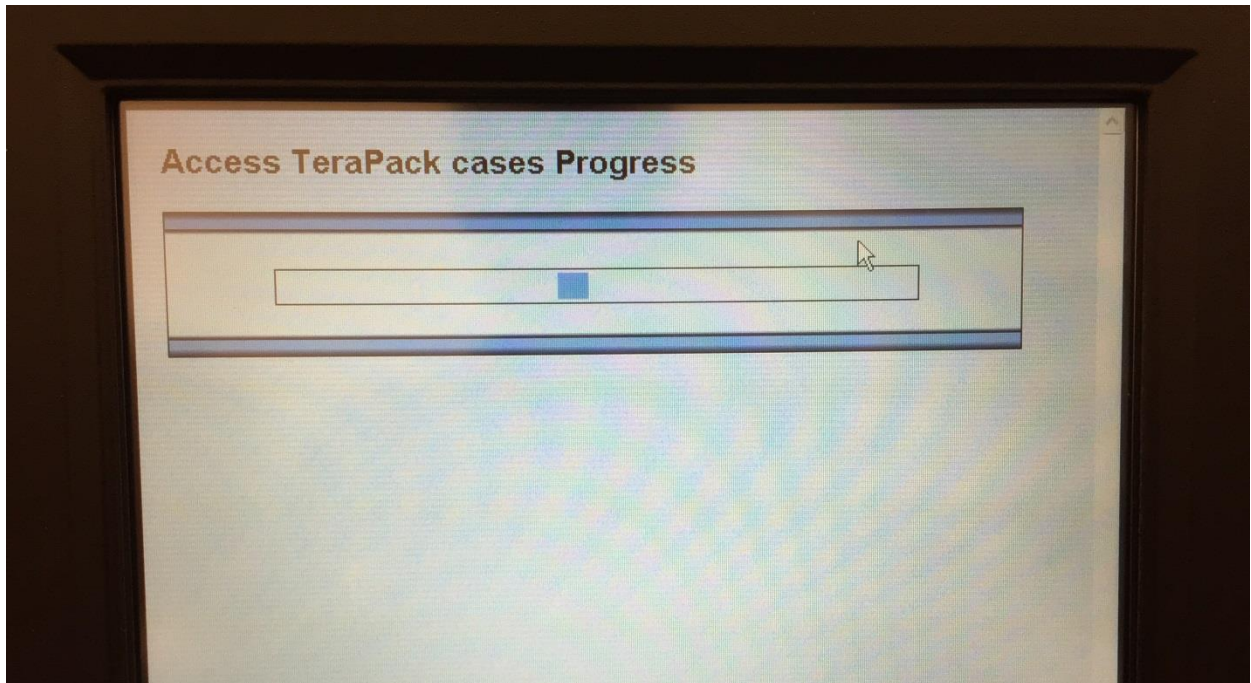

8. The TAP will then open. Remove the TeraPack, insert the tape(s), such that the barcode(s) will be oriented with the "D" character to your left. The TeraPack is slotted, so a tape can only be inserted in one direction in the TeraPack.



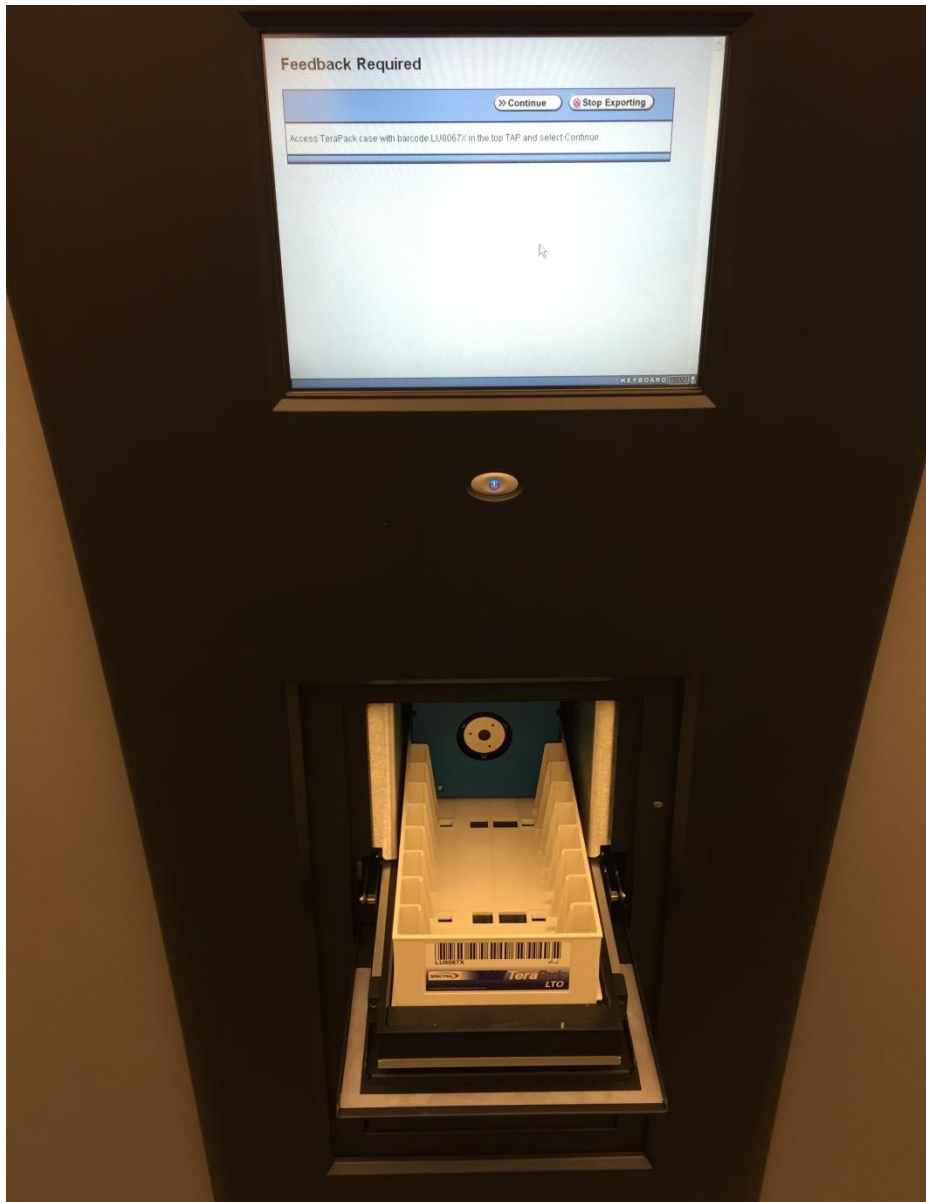

9. Insert the TeraPack back into the TAP, such that the tape spindle is facing you, as seen above. Then, select “**Stop Exporting**” to complete importing the tapes/TeraPack. An additional progress screen will be shown. Once you are returned to the Home screen, the import process is complete, and you can use the Diva Import site to re-import the tape(s) to DIVA.

Feedback Required

>> Continue

⊗ Stop Exporting

Access TeraPack case with barcode LU8067X in the top TAP and select Continue.

KEYBOARD